AlabrieLabrie Trucks


Installation Tips





Labrie Trucks

Due to the back design of Labrie trucks, the sensors will need to be mounted on the ICC bumper. If there is no toolkit, the sensors should be bolted onto the bar.

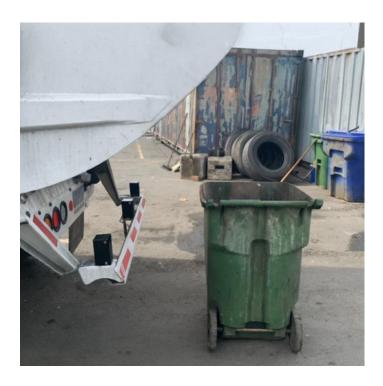

If there is a toolkit, the sensor can be mounted on top of the toolkit.



On top of the toolkit